



CREATING A CLEANER, SAFER, HEALTHIER WORLD.

EQUIPMENT



# 1610

## DUAL TECHNOLOGY CARPET CLEANER

- Dry carpets in under 30 minutes with ReadySpace® technology
- Provides interim cleaning and restorative extraction on one platform
- Power and flexibility in one machine

## IMPRESSIVE CLEANING POWER AND FLEXIBILITY



### CLEANING PROFESSIONALS WILL APPRECIATE THE ADVANTAGES OF 1610'S DUAL TECHNOLOGY

- ReadySpace® Technology – Carpets cleaned with 1610's ReadySpace technology are dry and ready for foot traffic in less than 30 minutes.
- Restorative Extraction – For periodic restorative cleaning, the 1610 delivers world-class extraction performance.

### CLEAN CARPETS, DRY AND READY IN MINUTES

Tennant's patented ReadySpace technology creates clean carpet spaces that are dry and ready to use in less than 30 minutes. Consider the benefits of quicker turnaround times:

- Reopen rooms and carpeted areas sooner
- Keep space accessible to guests and customers
- Improve carpet appearance in high traffic areas with more frequent cleanings
- Minimize disruption in locations with extended hours
- Reduce slip-and-fall risk when transitioning from damp carpet to hard floors

### OUTSTANDING CLEANING PERFORMANCE, BEAUTIFUL RESULTS

Together, frequent ReadySpace cleanings and periodic restorative extraction tackle the challenges of ongoing carpet maintenance. The results are beautifully clean carpets that last longer.

INSIDE THE

# 1610

Double agitation and counter-rotation separate more soil from both the front and back of carpet fibers. All in one machine pass.

Powerful vacuum lift means more dirt and debris is extracted out of the carpet and disposed in the recovery tank.



Unique soil transfer rollers are the basis for ReadySpace. When damp, these rollers grab dirt from carpet fibers and lift it into the machine.

Two powerful individual vacuum shoes extract the dirty water into the recovery tank.

Inside sprayers rinse soil from the rollers, not the carpet.

## FROM CLEAN TO CROWD IN MINUTES

Reopen the space sooner. Rapid dry times mean additional hours of carpet use.

### Open for Business

**7:30 AM** – Janitorial crews finish cleaning the building's carpeted hallways and lobby using ReadySpace.


**8:00 AM** – Carpets are clean, dry and ready to handle the morning's rush of foot traffic.



## PATENTED READYSPACE® TECHNOLOGY

ReadySpace technology targets soil within the carpet pile that vacuuming doesn't remove. Cleaning this dirt greatly improves carpet appearance and luster.

With ReadySpace, faster drying periods and first-rate cleaning performance make it easy to keep carpets clean and ready to use at all times.

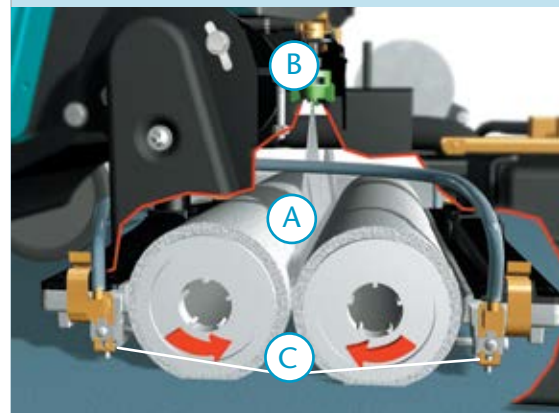

- Reduce rework, labor and safety costs by using only TennantTrue parts and service.
- Ensure optimal cleaning performance by selecting a TennantTrue Service program provided by a network of over 400 factory-trained Tennant service representatives.
- Improve uptime by leveraging TennantTrue parts and service.
- Simplify budgeting by bundling TennantTrue service plans, including parts, into the purchase or financing of your machine.

## 1610 DUAL TECHNOLOGY CARPET CLEANER

CLEANING SYSTEM	READYSpace®	RESTORATIVE EXTRACTION
Productivity		
Cleaning speed	100 fpm / 30.5 mpm	50 fpm / 155 mpm
Maximum per hour	13,200 ft <sup>2</sup> /hr / 1,226 m <sup>2</sup> /hr	5,500 ft <sup>2</sup> /hr / 510 m <sup>2</sup> /hr
Typical Range per hour	6,000–10,000 ft <sup>2</sup> /hr 560–930 m <sup>2</sup> /hr	2,000–4,000 ft <sup>2</sup> /hr 185–370 m <sup>2</sup> /hr
Recovery Tank Capacity		21 gal / 79 L
<b>SOLUTION SYSTEM</b>		
Tank capacity		21 gal / 79 L
Nominal solution flow rate	0.33 gpm / 1.3 L/min	1 gpm / 3.8 L/min
Solution pump – psi		100 psi / 6.9 bar
Waterlift		120 in / 305 cm
Vacuum Motor HP		Two 0.64 HP / 0.48 KW
Vacuum Motor Stages		3 stage
<b>BRUSH DRIVE SYSTEM</b>		
Motor HP		Two 0.625 HP / 0.315 KW
Motor RPM		700
Roller/Brush Length		22 in / 56 cm
<b>POWER SYSTEM</b>		
System Voltage		24 V
Total Power Consumption		65 amps
Battery Run Time (continuous cleaning rating)		2.5 hours
Battery Configuration		4-6 volt 240 AH batteries
<b>MACHINE SPECIFICATIONS</b>		
Length		60 in / 152 cm
Width		28 in / 71 cm
Height		42 in / 107 cm
Weight		590 lb / 268 kg
Product Weight (without batteries)		340 lb / 154 kg
Top Transport Speed		Up to 250 fpm / 76 mpm
Transaxle HP		0.2 HP / 0.104 KW continuous

### WARRANTY

See your local representative for warranty information.

Specifications subject to change without notice.

Choose GE Capital or U.S. Bancorp,  
our leasing providers, for simple, quick  
financing with flexible upgrade options.



Carpet and Rug Institute (CRI)  
Seal of Approval – Certified Bronze.

### SEEING IS BELIEVING

For a demonstration or additional information,  
call +1.800.553.8033 or email [info@tennantco.com](mailto:info@tennantco.com)

Tennant  
701 North Lilac Drive  
Minneapolis, MN 55422 USA

USA/Canada: +1.800.553.8033  
Quebec: +1.800.361.9050  
Overseas: +1.763.540.1315