



**NOBLES**<sup>®</sup>  
ENGINEERED BY TENNANT COMPANY

PRODUCT CATALOG



Built to be **tough.**  
Made to be **easy.**



## Built to be **tough**. Made to be **easy**.

It began a half century ago in Saint Paul, Minnesota. Back then, we made products for the military that were reliable, durable and easy to use. These products were built to be tough, made to be easy. Since that time our product line has evolved, but our commitment to these standards, created long ago, has remained the same.

Throughout the '80s and '90s, Nobles grew into a market leader, with the most easy-to-use, innovative and well-built cleaning machines in the industry. The designs were simple, and well engineered, with what was at that time, the new concept of extensive use of rotomold polyethylene housings. It was unbeatable.

Today, our products are still built to be tough, made to be easy. This tradition is the driving force that's guided us through every decision we've made and every machine we've built. It's our legacy, and it's not something we're about to change.

# Innovations

Changing how the world cleans.


Nobles industry-changing technologies offer a new approach to maintaining clean, safe and healthy environments. Our innovations like ec-H2O NanoClean®, ReadySpace®, and IRIS® Asset Manager technologies provide the ideal solution for your specific cleaning needs.



## ec-H<sub>2</sub>O<sup>®</sup> - Electrically Converted Water NanoClean

ec-H<sub>2</sub>O NanoClean<sup>®</sup> technology electrically converted water is created by an on-board e-cell that generates millions of very tiny microscopic bubbles known as nanobubbles that promote the cleaning efficacy of the solution.

This next generation solution offers the same great benefits of the first generation and now cleans better and cleans more soils in more applications. The name NanoClean, refers to the generation of nano-scale bubbles that are an important part of the cleaning mechanism.

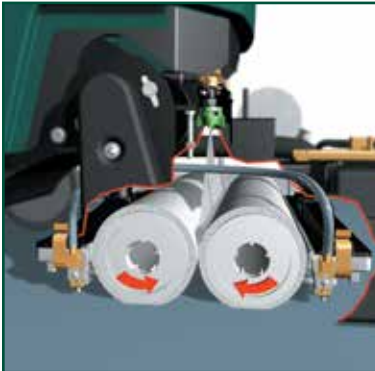

## READYSPACE<sup>®</sup> - More than clean, it's ReadySpace<sup>®</sup>

Carpets cleaned with ReadySpace<sup>®</sup> technology are dry and ready for foot traffic in 30 minutes or less. Reopen rooms sooner and keep carpeted spaces beautifully clean and attractive. With ReadySpace<sup>®</sup>, you achieve new levels of success.



## iris<sup>®</sup> Asset Manager

IRIS Asset Manager delivers key performance metrics, empowering you with intelligent insights to optimize fleet performance and reduce cost-to-clean.

# No-nonsense scrubbers. For no-nonsense jobs.



## Speed Scrub® Rider



Simple, easy-to-use rider scrubber for compact areas

- **cleaning path width:**  
disk: 26 in / 650 mm
- **tanks:** 29 gal / 110 L solution and recovery
- **brush motors:**  
disk: (2) 0.6 hp / 0.45 kW
- **brush motor speed:**  
disk: 225 rpm
- **down pressure:** up to 160 lb / 73 kg
- **battery run time:** up to 4.5 hours on one charge
- easy to clean Hygenic® tanks
- **low sound levels:**  
disk: 67 dBA



## Speed Scrub® 350



Great maneuverability and best-in-class productivity in a durable, ergonomically designed, stand-on scrubber

- **cleaning path width:**  
single disk: 20 in / 500 mm  
dual disk: 24 in / 600 mm
- **tanks:**  
solution: 14.1 gal / 53 L  
recovery: 18.4 gal / 70 L
- **vacuum motor:** 24 VDC, 0.62 hp / 0.46 kW
- **down pressure:** up to 91 lb / 41 kg
- **battery run time:** up to 4.0 hours on one charge based on machine head version
- **low sound levels:**  
single disk: 59.7 to 63.7 dBA  
dual disk: 61.3 to 64.5 dBA



## Speed Scrub® 500



Delivers effective cleaning results anytime – every time

- **cleaning path width:**  
dual disk: 26, 28, 32 in / 650, 700, 800 mm  
cylindrical: 28 in / 700 mm  
orbital: 28 in / 700 mm
- **tanks:**  
solution: 22.5 gal / 85 L  
recovery: 27 gal / 102 L
- **vacuum motor:** 24 VDC, 0.46 hp / 0.34 kW
- **waterlift:** 34 in / 864 mm
- **battery run time:** up to 4.5 hours on one charge
- **low sound levels:**  
dual disk: 67.4 dBA  
cylindrical: 68.3 dBA  
orbital: 66.9 dBA



## Speed Scrub® 300



High performance, consistent results on virtually any hard surface

- **cleaning path width:**  
single disk: 17 in / 430 mm (pad assist or self-propel); 20 in / 500 mm (pad assist or self-propel)  
dual disk: 24 in / 600 mm (self-propel)  
orbital: 20 in / 500 mm (self-propel)
- **tanks:**  
solution: 11 gal / 42 L  
recovery: 14 gal / 53 L
- **vacuum motor:** 24 VDC, 0.6 hp / 0.47 kW
- **waterlift:** 34.5 in / 876 mm
- **battery run time:** up to 3.8 hours on one charge based on machine head version
- **sound level:**  
single disk: 67 dBA  
dual disk: 67.7 dBA  
orbital: 67.5 dBA

Built to be **tough**. Made to be **easy**.



### Speed Scrub® 15 inch / Speed Scrub® 15 inch battery

Powerful deep cleaning results in small spaces

- **cleaning path width:** 15 in / 380 mm
- **estimated coverage/productivity:** up to 7,750 ft<sup>2</sup> per hr / up to 720 m<sup>2</sup> per hr
- **tanks:**
  - corded – solution: 3.0 gal / 11.4 L
  - corded – recovery: 4.5 gal / 17.0 L
  - battery – solution: 2.5 gal / 9.5 L
  - battery – recovery: 3.4 gal / 12.9 L
- **down pressure:** 38 lb / 17 kg
- **waterlift:** 25 in / 635 mm
- **power cord:** 50 ft / 15 m
- **battery run time:** up to 60 minutes (lithium-ion) / up to 45 minutes (AGM)
- **sound level:**
  - corded – 72 dBA
  - battery – 68 dBA



### i-mop XL Plus / i-mop XXL Plus

Performance of a scrubber with the mobility of a mop

- **cleaning path width:** 18 in / 46 cm | 24 in / 62 cm
- **practical productivity:** up to 20,000 ft<sup>2</sup> per hr / up to 1,800 m<sup>2</sup> per hr depending on model
- **tanks:**
  - solution: 1 gal / 4 L | 1.25 gal / 5 L
  - recovery: 1.5 gal / 6 L | 2 gal / 8 L
- **down pressure:** 48.4 lb / 22.5 kg | 70.4 lb / 32 kg
- **battery type:** Lithium Ion
- **battery run time:** 60 min

## Low-maintenance **sweepers**. High-performance results.



### Scout™ 7

Durable Battery-Powered Walk-Behind Sweeper. Easily and quietly clean hard floor and carpet with the Scout 7 maneuverable, cordless walk-behind sweeper. Provides maximum versatility for both indoor and outdoor environments.

- **cleaning path width:** 28 in / 700 mm
- **hopper capacity:** 1.6 ft<sup>3</sup> / 45 L
- **on-board battery w/charger:** 12V / 140 AH
- **battery run time:** 3 hours
- **filtration:** 99.5% efficient for particles up to 5 microns
- **sound level:** 70 dBA



### Scout™ 6

Durable Battery-Powered Walk-Behind Sweeper. Easily and quietly clean hard floor and carpet with the Scout 6 maneuverable, cordless walk-behind sweeper. Provides maximum versatility for both indoor and outdoor environments.

- **cleaning path width:** 25 in / 635 mm
- **hopper capacity:** 1.25 ft<sup>3</sup> / 35 L
- **on-board battery w/charger:** Gel 42 Ah / C20
- **battery run time:** 2 hours
- **filtration:** 99.5% efficient for particles up to 2 microns
- **sound level:** 61 dBA

# Reliable extractors.

## Done right, done fast, every time.



### Strive® Rider with ReadySpace®

ReadySpace® plus deep extraction: unbeatable dual-technology carpet cleaning

- carpets are clean, dry, and ready for use in less than 30 minutes with ReadySpace®
- **cleaning path width:** 28 in / 70 mm
- **tanks:**  
solution: 32 gal / 121 L  
recovery: 28 gal / 106 L
- piston design pump, for proper flow and pressure, rated at 250 psi maximum
- **vacuum motor:** dual 0.6 hp / 0.45 kW
- **productivity:**  
ReadySpace®: up to 13,000 ft² / 1,208 m²/hr  
extraction: up to 7,500 ft² / 700 m²/hr
- **battery run time:** 3 hours on one charge
- **sound level:** 73 dBA



### Falcon™ Ultra B

Versatile and powerful enough to clean medium and large spaces quickly

- compact and maneuverable battery operated machine
- **cleaning path width:** 22 in / 560 mm
- **tanks:** 17 gal / 64 L solution and recovery
- **vacuum motor:** 1 hp / 0.75 kW, 2-stage
- **batter powered:** 24 volt (two 12 volt)
- **waterlift:** 81 in / 2,060 mm
- **solution flow:** 100 psi, 1.2 gal / 4.5 L per minute
- **battery run time:** up to 4 hours on one charge
- **sound level:** 81 dBA



### Falcon™ 2800 Plus

Self-propelled extractor with dual modes to meet your unique carpet cleaning challenges

- **cleaning path width:** 22 in / 560 mm
- **tanks:**  
solution: 28 gal / 106 L  
recovery: 18 gal / 68 L
- **vacuum motor:** 2 hp / 1.49 kW, 3-stage
- exceptionally designed with rear-mounted scrub deck
- **brush speed:** 1,200 rpm
- **solution flow:** 100 psi, 1.2 gal / 4.5 L per minute
- comes with onboard spray wand
- **power cord:** 75 ft / 23 m
- **sound level:** 81 dBA



### Strive® with ReadySpace®

One machine with dual technologies – extraction and patented ReadySpace®, for all your carpet cleaning needs

- carpets are clean, dry, and ready for use in less than 30 minutes with ReadySpace®
- **cleaning path width:** 22 in / 560 mm
- **tanks:** 21 gal / 72 L solution and recovery
- **vacuum motor:** two 0.64 hp / 0.48 kW, 3-stage
- clean effectively on up to a 3 degree angle
- **brush/roller speed:** 400 rpm
- **waterlift:** 120 in / 3,050 mm
- **solution flow:** 100 psi / 6.9 bar, 1 gal / 3.8 L per minute
- **battery run time:** 2.5 hours on one charge
- **sound level:** 74 dBA

Built to be **tough**. Made to be **easy**.



### EX-SC-1020

Consistent cleaning results with pull-back operation, big tanks and exceptional extraction system

- **cleaning path width:** 20 in / 510 mm
- **tanks:**  
solution: 10 gal / 38 L  
recovery: 14.5 gal / 55 L
- **vacuum motor:** 1.8 hp / 1.34 kW, 3-stage
- **brush motor:** 1,380 rpm
- **solution flow:** 100 psi / 6.9 bar, 1 gal / 3.8 L per minute
- **power cord:** 50 ft / 15 m (detachable)
- **sound level:** 78 dBA



Shown with Titanium wand



### EXPLORER® C2/H5

Carpet extraction high-traffic areas

- Machines with Titanium wand (optional) are CRI Gold certified, and H5 is CRI Platinum certified with Orbio solution
- **tanks:**  
solution: 15 gal / 57 L  
recovery: 13.5 gal / 51 L
- **onboard heater:** H5 only
- **solution flow:**  
C2: 220 psi / 15.2 bar  
H5: 500 psi / 34 bar
- **waterlift:** 137 in / 3,480 mm
- **power cord:** 40 ft / 12 m
- **sound level:** As low as 68 dBA



### Strive® Compact with ReadySpace®

Deliver clean, dry small carpeted spaces in 30 minutes or less

- small, ultra low-profile design cleans small, hard-to-reach spaces
- **cleaning path width:** 15 in / 380 mm
- **tanks:** 5 gal / 19 L solution and recovery
- **roller speed:** 450 rpm
- **roller motor (2):** 0.3 hp / 0.22 kW
- **vacuum fan:** 2-stage, 1.2 hp / 0.89 kW
- **waterlift:** 86 in / 2180 mm
- **solution pump pressure:** 65 psi / 4.48 bar
- **power cord:** 50 ft / 15 m
- **sound level:** 69 dBA



### Speed EX®

Powerful deep cleaning results in small spaces

- small, ultra low-profile design cleans small, hard-to-reach spaces
- **cleaning path width:** 15 in / 380 mm
- **tanks:** 5 gal / 19 L solution and recovery
- **brush speed:** 1200 rpm
- **brush motor:** 0.4 hp / 0.30 kW
- **waterlift:** 86 in / 2180 mm
- **power cord:** 50 ft / 15 m
- **sound level:** 69 dBA

# Simple floor machines and burnishers. Making hard work a lot easier.



## SpeedGleam<sup>®</sup> Rider

Outstanding performance, productivity, and indoor environmental quality

- **burnishing path width:** 24 in / 610 mm, 27 in / 686 mm
- **motor:** 4 hp / 2.58 kW
- Free-floating head for excellent pad to floor contact
- **pad rotation:** 1500-1600 rpm
- **on-board charger**
- **battery run time:** up to 3 hours (lead acid)
- **sound level:** 69 dBA



## SpeedGleam<sup>®</sup> 5 / SpeedGleam<sup>®</sup> 7



Get propane-like gloss results with these battery operated walk-behind burnishers (SG7 only)

- **burnishing path width:**  
SG5: 20 in / 510 mm  
SG7: 24, 27 in / 610, 690 mm
- **motor:** SG5: 2.8 hp max / 2.1 kW  
SG7: 3.6 hp max / 2.6 kW
- **pad rotation:** SG5: 2,100 rpm  
SG7: 1,875 rpm
- **on-board charger**
- **battery run time:** up to 2.5 hours on one charge
- **sound level:**  
Passive: 65 dBA  
Active: 63-64 dBA



## BR-2000-DC

Achieve consistent results on uneven floors with the patented free-floating head

- **burnishing path width:** 20 in / 510 mm
- **motor:** 1.5 hp / 1.12 kW
- **pad rotation:** 2,000 rpm "on the floor"
- flexible dust skirt provides excellent dust control
- Insta-Adjust™ adjustable and folding handle
- low vibration and noise
- **power cord:** 75 ft / 23 m, safety yellow
- **sound level:** 66 dBA



## BR-1600-NDC

Return shine to finished floors with this durable burnisher

- **burnishing path:** 20 in / 510 mm
- **motor:** 1.5 hp / 1.12 kW
- **pad rotation:** 1600 rpm
- twist grip operation with safety locks
- **power cord:** 75 ft / 23 m, safety yellow
- **sound level:** 70 dBA



## FM-20-SS / FM-20-DS

Polish, scrub, and strip with the best-backed floor machine in the industry

- **available models:** 20 in / 510 mm
- **pad/brush rotation:**  
20 single speed: 175 rpm  
20 dual speed: 185 rpm scrub speed;  
330 rpm buff speed
- **motor:** 1.5 hp / 1.12 kW heavy-duty
- corrosion proof roto-molded polyethylene construction
- **power cord:** 50 ft / 15 m
- **sound level:**  
60 dBA, single speed  
71 dBA, dual speed



# Lightweight Vacuums.

## For heavy-duty cleaning.



### V-DMU-14

This dual motor vac has low sound levels, and powerful pick-up

- cleaning path widths: 14 in / 360 mm
- vacuum weight: 24 lb / 11 kg
- vacuum motor: 1.85 hp / 2.22 kW
- brush speed: 4,250 rpm
- vacuum bag capacity: 3.8 qt / 3.6 L
- filtration: HEPA filter
- vacuum hose: 15 ft / 4.57 m (4.1 stretch)
- power cord: 50 ft / 15 m
- sound level: 70 dBA



### V-SMU-14

CRI Silver and HEPA filtration performance standard. Engineered for ruggedness at a great price!

- cleaning path width: 14 in / 360 mm
- vacuum weight: 14.5 lb / 6.6 kg
- filtration: 3-stage HEPA standard
- power cord: 50 ft / 15 m
- sound level: <70 dBA
- standard accessories: telescopic aluminum with 4:1 stretch hose, on-board crevice tool wand, and dusting brush



### Independence Battery Light-Weight Upright Vacuum

CRI Bronze (battery) with low sound levels and powerful pick-up

- cleaning path widths: 13 in / 330 mm
- vacuum weight: 11 lb / 5 kg
- vacuum motor: 2 hp / 1.53 kW
- filtration: HEPA filter
- bag capacity: 7.6 qt / 7.25 L
- power source: 44 VDC / 2.9 Ah lithium ion
- sound level: < 70 dBA



### V-WA-30

Clean faster with our super-wide cleaning path vacuum

- cleaning path width: 30 in / 760 mm
- vacuum weight: 95 lb / 43.09 kg
- vacuum motor: two 1 hp / 0.75 kW
- brush speed: 1800 rpm
- bag capacity: 1.6 bushel, 2.0 ft<sup>3</sup> / 0.06 m<sup>3</sup>
- waterlift: 71 in / 1,804 mm
- power cord: 75 ft / 23 m
- sound level: <70 dBA



### Denali-10 / Denali-12 / Denali-16

Quietly clean the most noise sensitive areas with this powerful, dry canister vacuum

- 13 in / 330 mm floor tool cleans carpet or hard floors
- vacuum weight: 9 lbs / 4.1 kg | 13.9 lbs / 6.3 kg | 14.3 lbs / 6.5 kg
- filtration: 3-stage HEPA 12 filter
- power cord: 26 ft / 8 m | 40 ft / 12 m | 40 ft / 12 m
- sound level: 68 dBA | 63 dBA | 63 dBA
- tank capacity: 2.6 gal / 10L | 3.2 gal / 12 L | 4.2 gal / 16L

Built to be **tough**. Made to be **easy**.



### Aspen™ 6 / Aspen™ 6B

CRI Gold vacuum (corded) and CRI Silver (battery) with a lightweight design combined with powerful vacuum performance helps you control your clean

- **vacuum hose:** 12 ft / 3.7 m (4:1 stretch ratio)
- **vacuum weight:**  
corded: 13 lb / 5.9 kg | battery: 19 lb / 8.6 kg
- **filtration:** 4-stage HEPA filtration system
- **power source:**  
corded: 50 ft / 15 m  
battery: 36 VDC / 10.4 Ah lithium ion
- **sound level:**  
corded: 67 dBA  
battery: 63 dBA



### V-WD-9

Anywhere cleaning is possible with this portable battery powered unit with 9 gal / 35 L recovery tank

- **tanks:** Gross volume: 9 gal / 35 L  
Water volume: 6.6 gal / 25 L
- **vacuum motor:** 0.75 hp / 0.56 kW, 3-stage
- **vacuum hose:** 8 ft / 2.5 m
- **sound level:** 72 dBA
- additional accessories sold separately



### V-WD-24

Powerful motor and large tank capacity for great performance

- **tanks:** Gross volume: 24 gal / 90 L  
Water volume: 15.59 gal / 59 L
- **vacuum motor:** 1.3 hp / 0.97 kW, 2-stage
- **waterlift:** 100 in / 2,530 mm
- **front-mount squeegee cleaning path width:** 26 in / 660 mm
- **power cord:** 40 ft / 12 m
- equipped with a quick drain hose
- **sound level:** 70 dBA
- additional accessories sold separately



### V-WD-24P

Simple design and large tank capacity for powerful pumpout performance and maximum productivity

- **tanks:** Gross volume: 22.7 gal / 86 L  
Water volume: 14.5 gal / 55 L
- **vacuum motor:** 1.6 hp / 1.19 kW, 2-stage
- **waterlift:** 100 in / 2,530 mm
- **vacuum hose:** 16 ft / 5 m
- pumpout model
- equipped with a quick drain hose
- **optional front-mount squeegee cleaning path widths:** 26 in / 660 mm
- **power cord:** 40 ft / 12 m
- **sound level:** 70 dBA
- additional accessories sold separately

# Easy-to-operate **specialty** machines. The right tools for hard jobs.



with optional Titanium wand

## Quick Clean™ 12 Multi-Surface Cleaner

Restorative cleaning performance in an easy to use Multi-Surface Cleaner

- **tanks:**
  - solution: 15 gal / 57 L
  - recovery: 13.5 gal / 51 L
- **solution pump:** 400-1200 psi / 27.6-83 bar
- **waterlift:** 137 in / 3,480 mm
- **power cord:** 40 ft / 12 m, dual
- **sound level:** >75 dBA
- standard accessory: hard surface turbo tool
- optional accessory: Titanium wand



## ASC-15 All Surface Cleaner

Multipurpose cleaning machine enables you to clean, rinse, and blow dry hard surfaces

- **tanks:**
  - solution: 15 gal / 57 L
  - recovery: 19 gal / 72 L
- **vacuum motor:** 1.6 hp / 1.19 kW, 3-stage
- **blower:** 2-stage
- **solution pump:** 120 V, 500 psi
- **waterlift:** 117.4 in / 2,980 mm
- can be used as a carpet extractor with optional carpet wand, sold separately
- **power cord:** 25 ft / 8 m, safety yellow
- **sound level:** 82 dBA
- separate vacuum and blower systems for sanitary fixtures



## Commercial Dryer/Air Mover

Compact, stackable three-speed air mover dries areas quickly

- stackable
- 3 adjustable air-flow positions
- 3-speeds
- 0.6 hp / 522 Watt motor produces up to 1350 cfm
- **power cord:** 18.5 ft / 5,6 m
- **sound level:** 69 dBA
- optional wheeled hand cart available (PN 9014821)



### Operations.

We build most of our machines in Holland, Michigan, at a 240,000 sq. ft. manufacturing and administrative facility. With over 400 distributors throughout North America, our products are used by cleaning personnel and professional contractors across the country in the educational, healthcare, retail, government and commercial markets.

### Products.

We offer a complete line of rugged, no-nonsense cleaning machines including scrubbers, burnishers, carpet maintainers, vacuums, spotters, extractors and sweepers. If you've got a cleaning challenge, we've got the right cleaning machine. Contact your local distributor for more information.

