



WE ARE

PACIFIC FLOORCARE

PRODUCT CATALOG



OUR PURPOSE BUILT[®] PHILOSOPHY

PACIFIC FLOORCARE WAS FOUNDED IN 1946.

Pacific Floorcare[®] is dedicated to providing quality, innovative floor care equipment to our valued customers and end users. Our Purpose Built philosophy has us committed to giving building service contractors, facility managers and cleaning professionals the best, most efficient products in the industry.

As Hines Corporation's cornerstone company, Pacific Floorcare takes pride in its heritage and experience, as well as our leading technology and design of today.

04 SCRUBBERS

- 05 VS15 L-ION UPRIGHT
S-20 ORBITAL
S-28 ORBITAL
- 06 S-20 DISK
S-24 DISK
S-28 DISK
S-32 DISK
- 07 S20 AND S28 HEAVY-DUTY
- 08 RS28 RIDER ORBITAL AND DISK
- 09 INDUSTRY FIRST WARRANTY AND FEATURED BENEFITS

12 FLOOR MACHINES

- 13 FM-17 & FM-20 HEAVY-DUTY SINGLE SPEEDS
FM-17 & FM-20 HEAVY-DUTY DUAL SPEEDS
FM-17 & FM-20 EXTREME HEAVY-DUTY SINGLE SPEEDS
- 14 FM-20 ORBITAL
FM-28 ORBITAL
FM-ME MINI EDGER
B-1500 BURNISHER
- 15 FEATURED BENEFITS

16 VACUUMS & SWEEPERS

- 17 V12ES & V15ED UPRIGHT
SW16B L-ION VAC SWEEPER
BPV L-ION BACKPACK
- 18 SW20B WIDE AREA CLEANER
WAV-30 WIDE AREA UPRIGHT
WDV-18 WET/DRY
- 20 SW26 AND RSW28 VACUUM SWEEPERS

22 SPRAYERS

- 22 AM-15 AIR-ASSISTED SPRAYER

23 EXTRACTORS

- 23 SCE-11 SELF-CONTAINED

BATTERYSHIELD™

SHIELD YOURSELF FROM HIGH BATTERY COSTS.™

BatteryShield™ is the first integrated automatic battery protection system of its kind in the commercial cleaning equipment industry.

This technology maximizes battery life by protecting wet batteries from low water level damage.



HOW IT WORKS:

- Low water levels detected by a special sensor
- Sensor sends a signal to the machine
- A control panel LED is illuminated signaling the operator
- The machine's scrub brush motors are shutdown until batteries are watered
- The operator performs the watering maintenance using HydroLink®, the fastest, safest and most foolproof watering system available.

HOW YOU SAVE:

Keeping your batteries properly watered can save you up to 4 battery pack replacements, resulting in savings of up to \$2,800 over the life span of your scrubber.

04



"We reduced labor hours cleaning our pool deck by 80% using a Pacific orbital scrubber! This machine makes tough jobs easy."

Javier B.
Day Custodian



"The S-28 scrubber's higher rpm and larger 1.0 hp motors definitely cleans better than any machine I have used before."

David P.
Contract Manager

VS15 L-ION UPRIGHT



THE PERFECT COMPACT SCRUBBER FOR CLEANING RESTROOMS & CONFINED SPACES.

The cleaning components, squeegees and roller can be easily removed without any tools for a quick rinse after using the machine.

APPLICATIONS

- Tile & grout, wood floors, VCT, marble, ceramic, resin, quartz
- Hospitals, healthcare, and surgery rooms
- Hotels, offices, restaurants
- Day cleaning with ultra quiet noise level

S-20 ORBITAL



UNMATCHED CHEMICAL-FREE FINISH REMOVAL PERFORMANCE

The S-20 orbital scrubber has the highest down pressure in its category, and is the only one protected by a comprehensive machine warranty and a 5-year/5,000 hour isolator warranty. From unmatched cleaning specifications, to industry-first technologies, to industry-best warranty protection, the S-20 gets the job done at a price you can afford.

S-28 ORBITAL



HIGHEST DOWN PRESSURE IN THE 22-GALLON, 28-INCH ORBITAL CATEGORY

Pacific Floorcare's patented orbital scrubbing technology truly delineates itself with its chemical-free finish removal capabilities; delivering massive labor and material cost reductions and improved indoor air quality versus traditional stripping methods. It has the highest down pressure in the 22-gallon, 28-inch orbital category and is the only one protected by a comprehensive machine warranty and a 5-year/5,000 hour isolator warranty.

S-20 DISK



THE HIGHEST VALUE 20" SCRUBBER AVAILABLE WITH BRUSH ASSIST & TRACTION CONTROL

This machine features specifications and attributes you would find in the premium price ranges, but at a mid-market price. The S-20 offers key performance features such as Batteryshield® - the first integrated automatic wet battery protection system, up to 3.5 hours of run time, on-board "1, 2, 3-step" visual operation guide, and optional HydroLink® - single-point battery watering system.

S-24XM DISK



PURPOSE BUILT® TO MATCH YOUR CLEANING NEEDS

If you need a flexible cleaning tool, the S-24XM is the scrubber for you. This machine's features and options include powerful cleaning with 60 & 90 lb. down pressure positions, 360 rpm brush speed, Batteryshield® - automatic wet battery protection system, and 155 AH Wet Batteries - delivering max run times approaching 4 hours.

S-28 DISK



BEST-IN-CLASS SCRUBBING HORSEPOWER AND RPM

Of mid-size walk-behind scrubbers, the S-28 scrubber boasts up to 100% more horsepower and up to 67% higher rpms than the competition. From unmatched cleaning specifications to industry-first technologies, the S-28 features and options include Batteryshield® - the first integrated automatic wet battery protection system, 260 AH Wet Batteries, HEPA Filtration, 65 dBA, and on-board chemical dispensing.

S-32 DISK



PREMIUM SPECIFICATIONS. INDUSTRY-FIRST TECHNOLOGIES. AFFORDABLE PRICE.

From unmatched cleaning specifications to industry-first technologies, the S-32 features and options include Batteryshield® - the first integrated automatic wet battery protection system, 260 AH Wet Batteries, HEPA Filtration, 65 dBA, and on-board chemical dispensing.

S20 & S28 HEAVY-DUTY

PREMIUM SPECIFICATIONS. INDUSTRY-FIRST TECHNOLOGIES. AFFORDABLE PRICE.

The S20 HD and S28 HD stone and concrete auto scrubber programs feature specifications and innovations that are best in class with end-user needs in mind. This industry-first program combines unmatched machine engineered features & a high-value diamond pad system with a USDA certified floor cleaning impregnator. The system is available as two kits, either industrial or stone care, that both provide simple, easy outcomes.



A

Heavy-duty 750 W brush motors & 35 AMP breaker

B

Patented, industrial quality, manual scrub deck mechanism

C

Training graphics and QR codes on-board machine

D

3 Year battery warranty with BatteryShield™

E

USDA BioPreferred cleaner/enhancer & Pacific Diamond floor pads

RS28 RIDER SCRUBBER

PREMIUM SPECIFICATIONS. INDUSTRY-FIRST TECHNOLOGIES. LUXURY HANDLING.

The RS28 rider auto scrubbers are feature rich, packed with innovation, and are best in class with end user needs in mind. These versatile machines combine unmatched machine engineered features, high valued user friendly operations, and a need for speed performance.

Options include Batteryshield® - the first integrated automatic wet battery protection system, 360 AH Wet Batteries, HEPA Filtration, 65 dBA, and on-board chemical dispensing.



The smoothest riding scrubber in the industry (unparalleled comfort)

Orbital scrubber with superior down pressure will strip and scrub large area floors effortlessly

Flexibility to clean a variety of surfaces with brush and pad selection

CLASS LEADING WARRANTIES

PACIFIC AUTO SCRUBBERS

10
Year

Rotationally molded
components

5
Year

Parts*

3
Year

Labor

3
Year

Batteries**



*Does not apply to wear items

**All scrubbers equipped with Pacific's patented battery protection system

***All scrubbers and floor machines equipped with Pacific's patented orbital technology



5 year / 5,000 hours

ISOLATOR WARRANTY


All scrubbers and floor machines equipped with Pacific's patented orbital technology

SCRUBBERS

09

PACIFICFLOORCARE.COM

THE PACIFIC
ORBITAL IS A
TIME SAVING,
LABOR SAVING
AND MONEY
SAVING PIECE OF
EQUIPMENT.

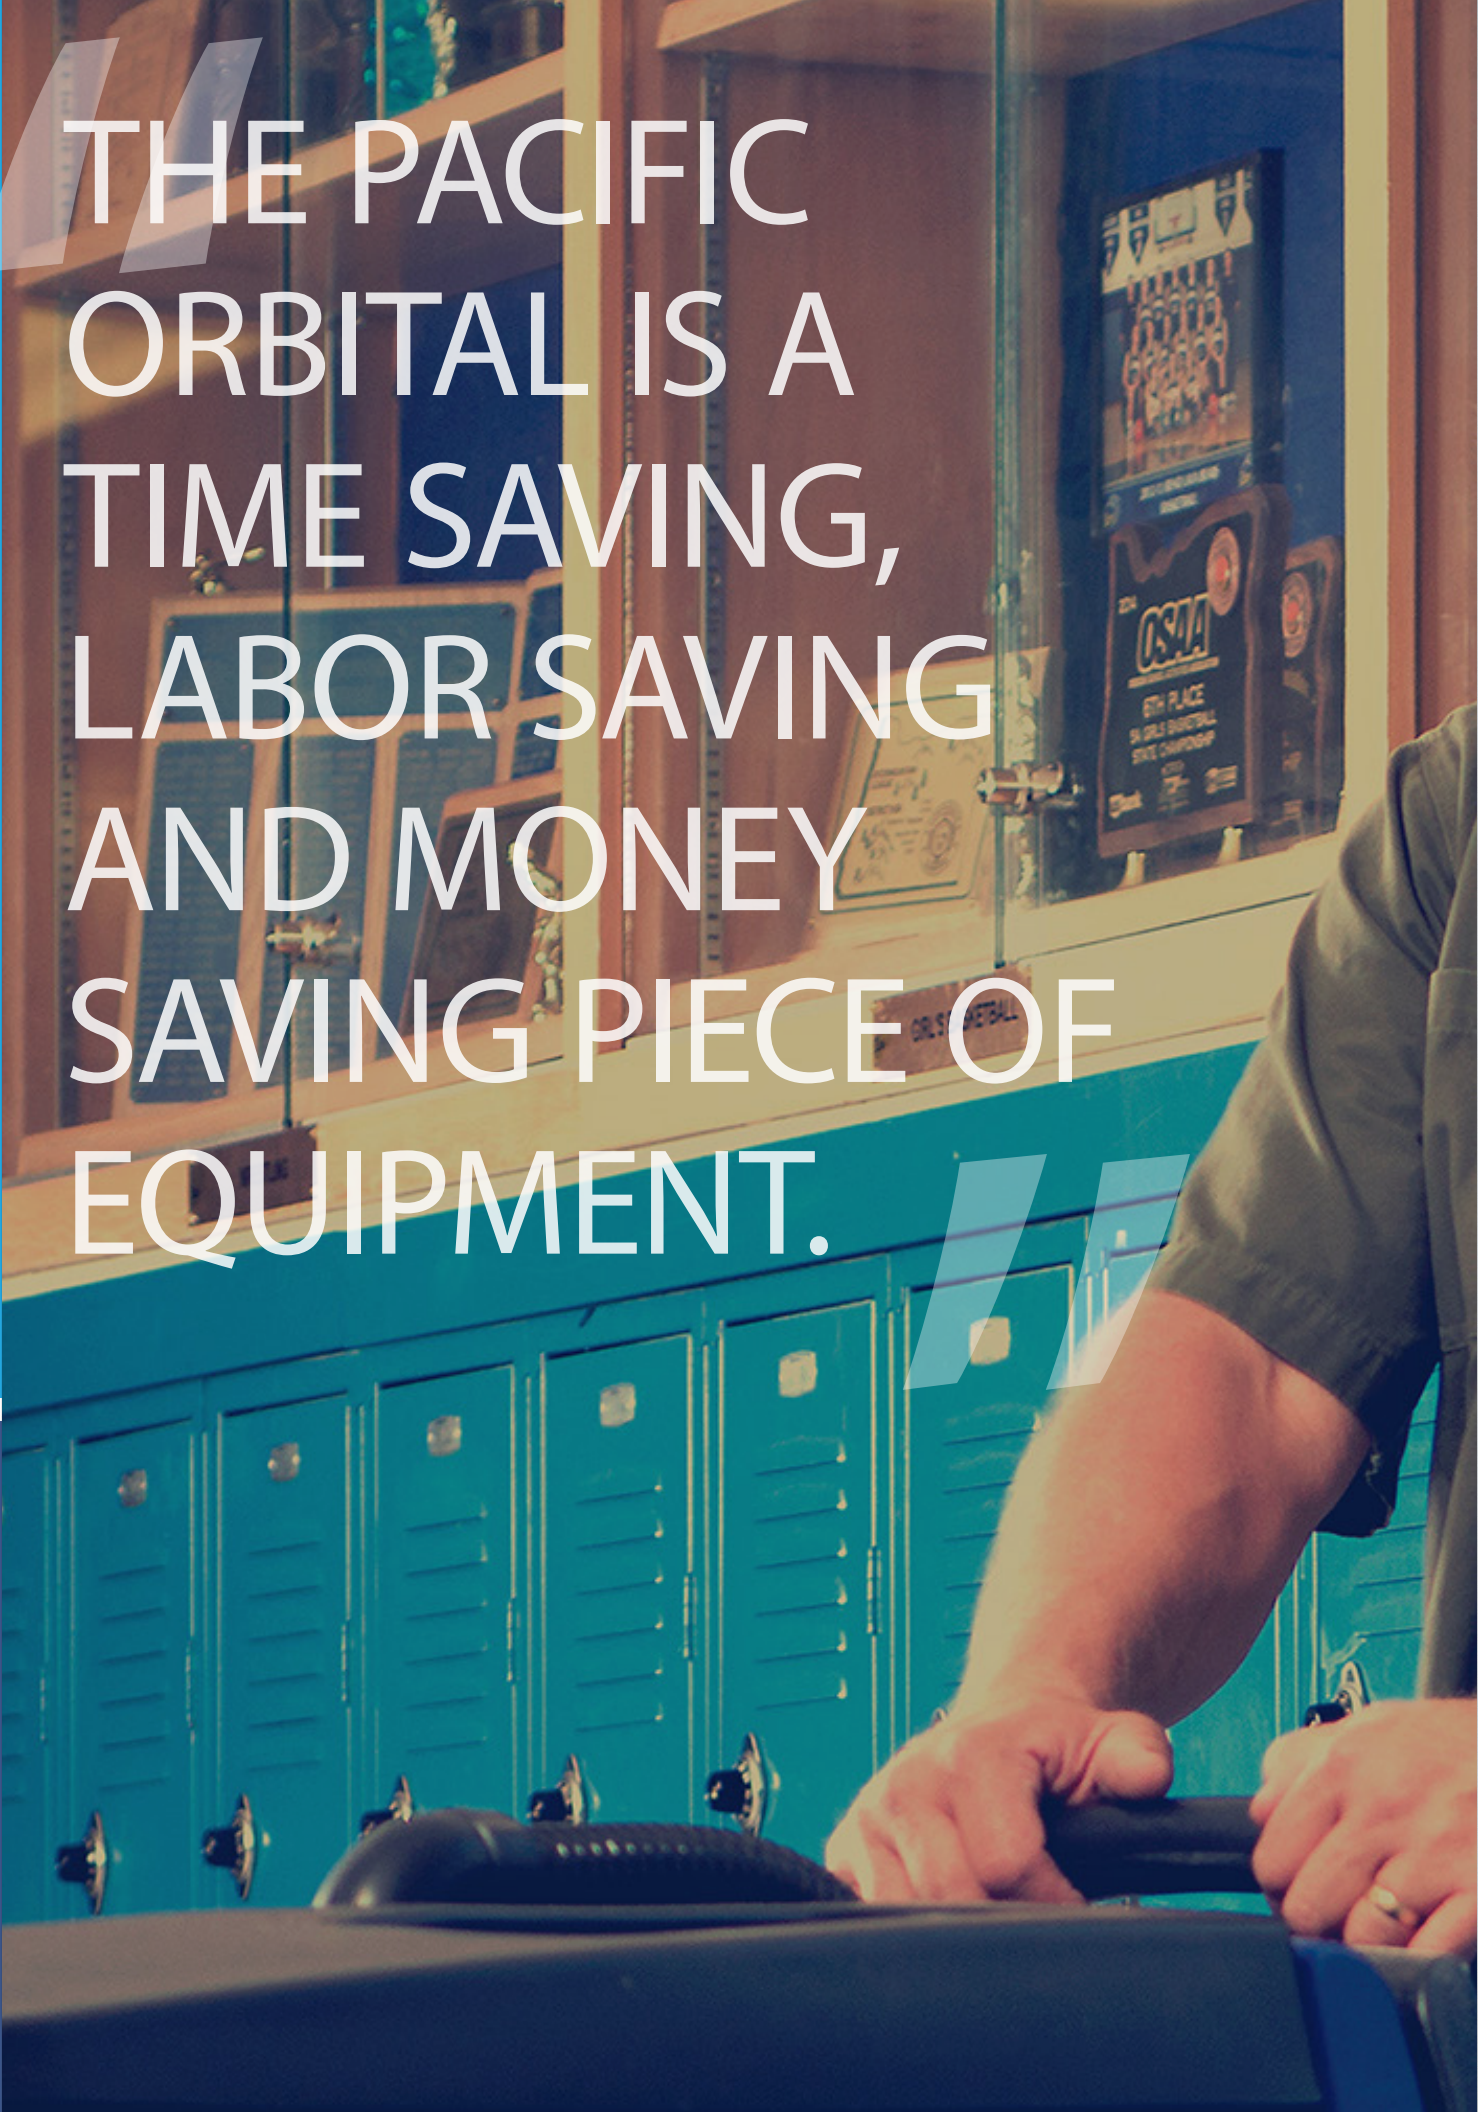

FEATURED BENEFITS

S SERIES AUTOSCRUBBERS

CHEMICAL-FREE FINISH REMOVAL WITH ORBITAL TECHNOLOGY



A

1, 2, 3-step training graphics on the control panel

B

Clean on your schedule with sound levels down to 63 dBA

C

CFR with Pacific's patented orbital technology

D

5 year / 5,000 hour isolator warranty

TOP-RATED

**DESIGNED FOR PERFORMANCE.
BUILT TO LAST.**

These orbital floor machines are powerhouses delivering the highest combination of down pressures and rpm in the industry.

Add to its power features like the first high-speed orbital to achieve less than 69 dBA noise levels, an instantly adjustable handle, and optional HEPA dust control, and you've got a Purpose Built® tool that can perform the toughest tasks anytime, anywhere.

PACIFIC FLOORCARE® STARTED AS A FLOOR MACHINE COMPANY AND OVER 70 YEARS LATER, THEY ARE STILL **BUILT TO LAST.**

MULTI-TASKING MADE EASY


- Industry-first "safe start" indicator
- Convenient and instant handle adjustment from the operator position
- Rugged, long-life construction with 10-year base warranty
- 140lbs standard down pressure, 14/3, heavy-duty STO yellow electrical cord, ETL approved, tested to UL & CSA standards.



"Batteryshield is the best battery protection we've seen. We have no more worries when a job must be done."

Willie E.

Custodial Supervisor

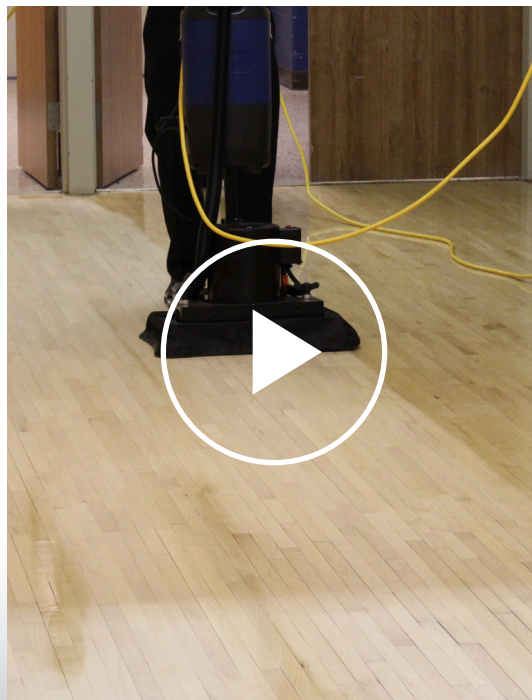

"With Pacific orbital scrubbers and BatteryShield®, these machines pay for themselves very quickly."

John P.

Custodial Supervisor

FM-17 & FM-20 HEAVY-DUTY SINGLE & DUAL SPEEDS

RUGGED CONSTRUCTION WITH HEAVY-DUTY 1.5 HP MOTOR AND 10-YEAR BASE WARRANTY.

Rugged construction has been in Pacific's floor machine DNA since the company's origin. With this heritage and experience as its foundation, Pacific's line up also brings new ingenuities to the industry's most essential tool including the Industry's-first safe start indicator, rugged construction with heavy-duty 1.5 hp motor and 10-year base warranty, and a noise level of less than 58 dBA.

APPLICATIONS

- Floor scrubbing
- Finish stripping
- Light buffing
- Carpet bonneting
- Sanding



FM-17 & FM-20 EXTREME HEAVY-DUTY SINGLE SPEEDS

EXTREME HEAVY-DUTY - PURPOSE BUILT® FOR THE TOUGH STUFF - GRINDING, SANDING, SCARIFYING - IT LOVES IT.

You don't run from the tough jobs, so make sure to bring a machine that has your back. And, a machine that does these kinds of jobs can't have a weak link - it has to be designed top-to-bottom with tried-and-tested materials and components. The EHD unit includes an extreme-duty TEFC motor, solid steel, harsh duty gear box and coupler system, optional 40 pound weight kit, and a 10-year base warranty.



FM-20 & FM-28 ORBITAL



APPLICATIONS

- Chemical-free finish removal (dry prep)
- Finish stripping (with chemical)
- Floor scrubbing (even grouted floors)
- Stone grinding and polishing
- Cement grinding and polishing
- Scarifying
- Sanding

HIGHEST PERFORMANCE WITH THE CLEANEST, QUIETEST AND EASIEST OPERATION.

The orbital floor machines are powerhouses delivering the highest combination of down pressures and rpm in the industry. Then, add to its power features that increase health, safety and ease of use and you've got a Purpose Built® tool that can perform the toughest tasks anytime, anywhere. You'll benefit from having features like convenient and instant handle adjustment from the operator position, optional HEPA dust control system, below 64 dBA, and a 3-year parts warranty.

FM-ME MINI EDGER



UNMATCHED CHEMICAL-FREE FINISH REMOVAL PERFORMANCE

There are not many tools more flexible than the Pacific Floorcare® FM-ME floor machine and edger unit - plus, it delivers industrial performance. The mini-edger truly transfers many of your manual detail cleaning activities into an automated cleaning tool. Use the FM-ME on hard floors, carpets, baseboards, stair treads, elevator tracks and other hard to reach, tight spaces - you'll run out of time, before you'll run out of uses!

B-1500 BURNISHER



HEAVY-DUTY CONSTRUCTION FOR YEARS OF HIGH-GLOSS FLOORS

If you are in charge of a high-gloss floor, get a tool that will deliver the reflective finish everyone appreciates and expects. The all B-1500 "fits the bill" with 1,500 rpm delivering pad top speeds over 7,850 ft/min, convenient and instant handle adjustment from the operator position, carbon brush wear indicators, and a rugged, long-life construction with a 10-year base warranty.

FEATURED BENEFITS

FM-ME MINI EDGER

ATTACHMENTS FOR HARD FLOOR & CARPET



- A** Pull the trigger and get cleaning
- B** Fit to your comfort with quick adjust handle
- C** Heavy-duty performance with almost 20 lb of focused down pressure at 765 rpm
- D** Extreme flexibility with multiple attachments for baseboard, hard floor and carpet cleaning – great for stairs, too!

UNMATCHED VALUE

INCREDIBLY FEATURE-RICH AND ENVIRONMENTALLY FRIENDLY

The Pacific line of soft floor machines are built with innovation and durability in mind. Optional true HEPA upright vacuums contain airborne contaminants with 99.97% filtration efficiency, and their ergonomic design provide hours of comfortable use.

These vacuums and their innovative features offer more than competitive models priced higher, which means you get more value for less money.

THE PACIFIC FLOORCARE® FAMILY OF VACUUMS IS GEARED TOWARD GETTING YOUR JOB DONE QUICKLY.

WORK SMARTER NOT HARDER


- Up to 5,000 rpm brush speed to loosen soil for optimal cleaning
- Multi-purpose built models for soft and hard flooring types
- 36V-6 Ah Lithium-ion batteries with 800 recharging cycle lifetime. Interchangeable to all L-ION equipped models

16



"Having the S-20's additional down pressure and horsepower is critical - you never know what you are going to run into on a new start-up!"

—
Julio C.
Contract Cleaner

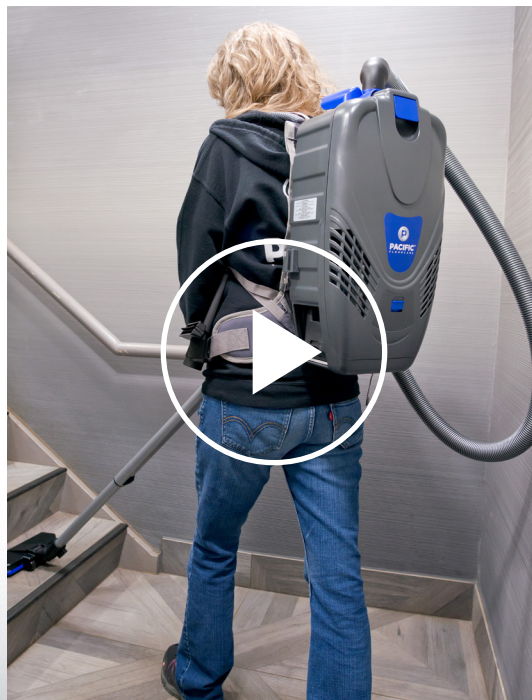

"The Pacific orbital is a time saving, labor saving and money saving piece of equipment."

—
Walter N.
Custodial Supervisor

V12ES & V15ED UPRIGHT

SINGLE & DUAL MOTORS



DESIGNED FOR SIMPLICITY, DURABILITY AND SUPERIOR PRODUCTIVITY.

The machines offer powerful vacuum capabilities with the dynamically balanced 5,000 rpm brush roller for great cleaning effectiveness. The low profile, adjustable handle and on-board tools give the operator unmatched cleaning ergonomics.

APPLICATIONS

- Schools
- Universities
- Daycares
- Office buildings
- Convention centers
- Hospitals
- Long-term care
- Medical centers

SW16B L-ION VAC SWEEPER



PURPOSE BUILT™ FOR A VARIETY OF FLOORING SURFACES.

The 4 wheel stance keeps the base level and in contact with the floor surface for exceptional recovery. The patented dual brush system releases tough soils and the filtration system achieves efficiency of 99% at 0.5 microns.

A highly flexible tool for your carpet cleaning regimen.

BPV L-ION BACKPACK



DESIGNED FOR SUPERIOR PRODUCTIVITY, OPERATOR ERGONOMICS AND COMFORT IN MIND.

The Pacific BPV L-ION ultra light battery backpack vacuum has been designed for superior productivity, operator ergonomics and comfort in mind. The powerful Lithium-Ion battery source provides exceptional productivity with quick recharge time. The BPV L-ION is a highly flexible tool for your carpet cleaning regimen.

SW20B WIDE AREA CLEANER



THE SW20B PRESENTS LONG 90 MINUTE RUN TIME FOR ENHANCED PRODUCTIVITY.

The machine comes well-equipped with on-board tools and is available with an optional attachment which converts the SW20B into a encapsulation carpet cleaner.

APPLICATIONS

- Schools
- Universities
- Daycares
- Office buildings
- Convention centers
- Hospitals
- Long-term care
- Medical centers

WAV-30 WIDE AREA UPRIGHT



CRI CERTIFIED PERFORMANCE AND COMES STANDARD WITH AN OFF-BOARD TURBO HEAD TOOL.

The WAV-30 brings unmatched value in the world of low profile wide area vacuums. When investigating vacuums in this class, you'll find this is the most affordable combination of performance and convenience features on the market.

It includes 2,500 rpm brush speed combined with high airflow from dual 1 hp vac motors, unique standard tool set including turbo head floor tool, and live suspension for optimal recovery on uneven floors.

WDV-18 WET/DRY



PURPOSE BUILT® WITH 70 YEARS OF AMERICAN INNOVATION.

The WDV-18 brings unmatched innovation when it comes to wet/dry vacuums. This vacuum is second to none. Simple innovation and construction flow through this product, and it brings new ingenuity to the industry's most helpful tool. With the impressive tilt-to-drain feature, this product is a step above the rest.

FEATURED BENEFITS

WDV-18 WET/DRY

POWERFUL 1¹/₄ HP MOTOR

**A**

Opportune tilt-to-drain feature!
Easily empty the tank when a
floor drain is not available.

B

Convenient cord wrap on the
vac handle. No more missing
cords - keep it all in sight!

C

Safe & simple to use lever to
engage squeegee head.

D

Easy to change squeegee
- two usable edges per
blade, and you can change
it without tools! Plus, it can
breakaway with impact.

SW26 & RSW28

**PREMIUM SPECIFICATIONS. PRODUCTIVITY
ADVANCEMENTS. AFFORDABLE PRICE.**

The SW26 walk-behind and RSW28 rider vacuum sweepers feature specifications and innovations that are best in class with end user needs in mind. These unique vacuum sweepers have unmatched machine engineered features, high valued productivity, with simplicity in mind.





SW26 & RSW28 VACUUM SWEEPERS

- Carpeted or hard surface hallways, ballrooms, auditoriums or cafeterias
- Hospitals and long-term care facilities
- Schools and universities
- Hospitality and lodging industry
- Warehousing and logistics
- Building service contractors



AM-15 AIR ASSISTED SPRAYER

HIGH VOLUME. EFFICIENT & EFFECTIVE PRODUCTIVITY.

**UP TO 3.5 HOURS
OF RUN TIME
ON A FULL TANK**



Pacific's AM-15 is a versatile spraying unit with the overall capacity to provide superior productivity for large area disinfection. The unit will out perform the commonly used handheld machines on the market today. The large 15 gallon tank provides continual usage - a one stop chemical source. Fill it and disinfect your entire facility.



SCE-11 EXTRACTOR

11 GALLON, SELF-CONTAINED EXTRACTOR



100 PSI PUMP & 2 HP MOTOR

- A** Brush assists movement and creates "effortless" motion
- B** Proven durability – key components used in industry applications for over 20 years
- C** High pressure 100 PSI pump
- D** Floating brush deck delivers even agitation – key to CRI Certified performance
- E** Corrosion & dent resistant tanks, vac shoe and brush deck

2
2
5
9



PACIFICTM
F L O O R C A R E

PURPOSE BUILT.TM



PACIFIC[®]
F L O O R C A R E

800.968.1332
pacificfloorcare.com

2259 South Sheridan Drive
Muskegon, MI 49442

PACIFIC FLOORCARE TAKES PRIDE IN ITS HERITAGE AND EXPERIENCE, AS WELL AS OUR LEADING TECHNOLOGY AND DESIGN OF TODAY.