

PIRANHA



BRAND
TM

*Innovative and responsible products for
an ever changing world...*

Equipment Catalog

Conventional Floor Machine

Piranha HD 20" Floor Machine w/ Pad Driver


Piranha HD 17" Floor Machine w/ Pad Driver

This heavy-duty 175 rpm floor machine features a twin capacitor, 1.5 HP, AC motor, dual steel operating triggers, 5" non-marking wheels, and a 50' safety yellow power cord. The all steel construction provides superior strength and longevity. Convenient thumb operated safety switch, variable position one-piece steel handle, and 360 degree non-marking wrap around bumper are additional benefits to this work horse.



ACCESSORIES:

Short trim plastic fibers hold floor pads
Piranha 20" Pad Driver
Piranha 17" Pad Driver

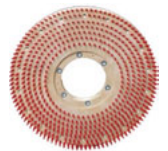

Used for medium-duty scrubbing concrete, vinyl, terrazzo, and other hard floors
Piranha 20" Poly Scrub Brush
Piranha 17" Poly Scrub Brush



Used for light-duty scrubbing concrete, vinyl, terrazzo, carpet, and other hard floors
Piranha 20" Nylon Scrub Brush
Piranha 17" Nylon Scrub Brush



Used for polishing vinyl, stone, terrazzo, wood, and rubber floors
Piranha 20" Horse Hair Polishing Brush
Piranha 17" Horse Hair Polishing Brush



Used for heavy-duty scrubbing concrete, vinyl, terrazzo, and other hard floors
Piranha 20" Heavy-Duty Nylo Grit Brush
Piranha 17" Heavy-Duty Nylo Grit Brush



Piranha 20" Splash Guard - fits most 20" or smaller floor machines
Piranha 17" Splash Guard - fits most 17" or smaller floor machines



Piranha 4 Gallon Solution Tank - fits most floor machines



Oscillating Floor Machine

Piranha Oscillating 14" x 20" Floor Machine

This heavy-duty rectangular oscillating floor machine is ideal for cleaning and stripping a wide variety of floor surfaces. The 1.5 HP TEFC - 180 frame - motor operates at 1740 rpms. The powder coated, industrial welded frame is rugged and reliable. One piece heavy-duty steel handle, dual steel operating triggers, and a 50' safety yellow cord are additional benefits.



Piranha Ultra Oscillating 14" x 28" Floor Machine

Piranha Ultra Oscillating 14" x 20" Floor Machine

Revolutionary rectangular floating head design allows for easy maneuverability, 100% pad coverage, and less fatigue. The quick handle / carriage release makes transporting effortless. The twin capacitor, 1.5 HP TEFC - 180 frame - motor operates at 1740 rpms. The 8" non-marking ball bearing wheels and multiple position handle are additional benefits.



ACCESSORIES:

Piranha 14" x 20" Light-Duty White Cleaning Pad (5/cs)

Piranha 14" x 28" Light-Duty White Cleaning Pad (5/cs)

Piranha 14" x 20" Medium-Duty Red Cleaning Pad (5/cs)

Piranha 14" x 28" Medium-Duty Red Cleaning Pad (5/cs)

Piranha 14" x 20" Heavy-Duty Green Scrubbing Pad (5/cs)

Piranha 14" x 28" Heavy-Duty Green Scrubbing Pad (5/cs)

Piranha 14" x 20" Heavy-Duty Black Cleaning / Stripping Pad (5/cs)

Piranha 14" x 28" Heavy-Duty Black Cleaning / Stripping Pad (5/cs)

Piranha 14" x 20" Maroon Stripping Pad (10/cs)

Piranha 14" x 28" Maroon Stripping Pad (10/cs)

Piranha 14" x 20" Maroon 3M Surface Prep Stripping Pad (10/cs)

Piranha 14" x 28" Maroon 3M Surface Prep Stripping Pad (10/cs)

Piranha 14" x 20" Sand Screen 120 Grit (10/cs)

Piranha 14" x 28" Sand Screen 120 Grit (10/cs)

Stone Care/ Diamond Honing

Piranha 20" Stone Care Floor Machine with Accessories

Piranha 17" Stone Care Floor Machine with Accessories



This extra heavy-duty 175 rpm floor machine is designed for stone care projects. It features two 25 lb horse shoe weights, 4 gallon solution tank, floating splash guard, and diamond pad driver. The all steel construction provides superior strength and longevity. Convenient thumb operated safety switch, variable position one-piece steel handle, and 360 degree non-marking wrap around bumper are additional benefits.

Piranha Diamond Honing Weight Kit

These ergonomically designed 25 lb horse shoe weights fasten easily to the base of the floor machine for consistent weight distribution while diamond honing.

Piranha 2 - 25 lb Horse Shoe Weights



Piranha Diamond Honing Pad Driver

Whether it's honing concrete, terrazzo, marble, or granite, the Piranha Diamond Honing Pad Driver delivers results. Designed for (4) 4" Piranha Diamond Honing Disks.

Piranha 20" Diamond Honing Pad Driver
Piranha 17" Diamond Honing Pad Driver



Piranha Diamond Honing Disks

These high performance diamond honing disks come in a wide array of grits - 50, 120, 220, 400, 800, 1800, and 3500. Whether you're polishing or cutting, you won't be disappointed with these quality resin disks. Effective on a variety of surfaces including concrete, terrazzo, and marble.

Piranha 4" - 50 Grit Terrazzo Diamond Honing Disk Set
Piranha 4" - 120 Grit Terrazzo Diamond Honing Disk Set
Piranha 4" - 220 Grit Terrazzo Diamond Honing Disk Set
Piranha 4" - 400 Grit Terrazzo Diamond Honing Disk Set
Piranha 4" - 800 Grit Terrazzo Diamond Honing Disk Set
Piranha 4" - 1800 Grit Terrazzo Diamond Honing Disk Set



Piranha Diamond Honing Soft Cut Disks

These high performance diamond honing disks provide the ultimate cutting tool. The metal diamond impregnated disks are designed for extreme cutting needs.

Piranha 3" - 120 Grit Diamond Honing Soft Steel Cut Disk
Piranha 3" - 220 Grit Diamond Honing Soft Steel Cut Disk



Electric High Speed Burnisher

Piranha 20" - 1800 Folding Handle

Piranha 20" - 1800 Fixed Handle

This 20" - 1800 rpm cord electric burnisher has a heavy-duty DC rectified 1.5 HP motor. It is available with a folding handle which provides floating down pressure and convenient storage, or a fixed handle for a professional touch. The flexible pad holder and 75' safety yellow power cord are additional benefits.

Piranha 20" - 1500 Fixed Handle

This 20" - 1500 rpm cord electric burnisher has a heavy-duty DC rectified 1.5 HP motor. The fixed handle allows the user to increase down pressure as needed to achieve a deeper shine. The flexible pad holder and 75' safety yellow power cord are additional benefits.

Piranha 20" - 2000 Dust Control

This 20" - 2000 rpm cord electric burnisher has a heavy-duty DC rectified 1.5 HP motor and dust control. The fixed handle allows the user to increase down pressure as needed to achieve a deeper shine. The flexible pad holder and 75' safety yellow power cord are additional benefits.



Wind Blower

Piranha Air Mover

Piranha Air Mover with Transport Kit

This high volume 3 speed (2950 cfm, 2500 cfm, 2000 cfm) 1/2 HP Air Mover is ideal for drying (hard/carpet) floors quickly and efficiently. It is sturdy and easily portable, weighing only 31 pounds. It is stackable for easy storage.

Transport Wheel Kit Accessory

This sturdy and dependable Blower Transport Wheel Kit provides easy and convenient transportability.



Conventional Polishing Floor Pads



Burnishing Pads

An extremely durable, long-lasting high-speed burnishing pads. These pads work well on a variety of coatings. Can be used with 300 rpms when spray buffing, or up to 3000 rpms and above when burnishing.

Soft to Medium Floor Finishes - Ideal for Propane and Battery Equipment

Piranha 20" Champagne Rubberized Burnishing Pad (5/cs)

Piranha 27" Champagne Rubberized Burnishing Pad (2/cs)

Soft to Medium Floor Finishes - Use dry or spray buff

Piranha 20" Beige Burnishing Pad (5/cs)

Piranha 27" Beige Burnishing Pad (2/cs)

Soft to Medium Floor Finishes - Ideal for frequent burnishing

Piranha 20" Aqua Burnishing Pad (5/cs)

Piranha 27" Aqua Burnishing Pad (2/cs)

Used on all floor finishes - Ideal for top dressing highly polished floors

Piranha 20" Blue Ice Burnishing Pad (5/cs)

Piranha 27" Blue Ice Burnishing Pad (2/cs)

Natural Fiber Polishing Floor Pads

The most aggressive high-speed floor pad available, this pad is designed for results. Works well on softer finishes to provide a "wet look" gloss. Can be used on harder finishes, but you may notice powdering of the finish. Great for use in stone polishing programs. Works well at all buffing speeds. Can be used on battery or electric high-speed burnishers.

Piranha 20" Buckaroo "Hair" Burnishing Pad (5/cs)

Piranha 27" Buckaroo "Hair" Burnishing Pad (2/cs)

This unique floor pad combines a Beige Thermal floor pad with a Natural Fiber "Hair" floor pad to produce a high performance, balanced high-speed burnishing pad. This pad is designed for results. Works well on soft and hard finishes to provide a "wet look" gloss. Works well at all buffing speeds. Can be used on battery or electric high-speed burnishers.

Piranha 20" Jackaroo Lite "Hair Lite" Burnishing Pad (5/cs)

Piranha 27" Jackaroo Lite "Hair Lite" Burnishing Pad (2/cs)

Conventional Cleaning Floor Pads



White Floor Pads

The least aggressive floor pad you'll find. This age-old color pad is great for spray buffing, dry buffing, and light-duty cleaning needs when scrubbing. The pad is best used with speeds ranging from 175 rpms to 1500 rpms. Can be used on burnishers as well as autoscrubbers.

- Piranha 27" Light-Duty White Polishing / Cleaning Pad (2/cs)
- Piranha 20" Light-Duty White Polishing / Cleaning Pad (5/cs)
- Piranha 17" Light-Duty White Polishing / Cleaning Pad (5/cs)
- Piranha 15" Light-Duty White Polishing / Cleaning Pad (5/cs)
- Piranha 14" Light-Duty White Polishing / Cleaning Pad (5/cs)
- Piranha 13" Light-Duty White Polishing / Cleaning Pad (5/cs)

Red Floor Pads

As versatile of a floor pad you'll ever find. This age-old color pad is great for spray buffing, dry buffing, and medium-duty cleaning needs when scrubbing. The pad is best used with speeds ranging from 175 rpms to 1500 rpms. Can be used on burnishers as well as autoscrubbers.

- Piranha 20" Medium-Duty Red Polishing / Scrubbing Pad (5/cs)
- Piranha 17" Medium-Duty Red Polishing / Scrubbing Pad (5/cs)
- Piranha 15" Medium-Duty Red Polishing / Scrubbing Pad (5/cs)
- Piranha 14" Medium-Duty Red Polishing / Scrubbing Pad (5/cs)
- Piranha 13" Medium-Duty Red Polishing / Scrubbing Pad (5/cs)

Blue Floor Pads

This floor pad is designed for medium-duty cleaning/scrubbing. The pad is best used with speeds ranging from 175 rpms to 300 rpms. Works well on autoscrubbers and floor machines. Can be used to prepare floors in scrub and re-coat programs.

- Piranha 20" Medium-Duty Blue Scrubbing Pad (5/cs)
- Piranha 17" Medium-Duty Blue Scrubbing Pad (5/cs)
- Piranha 15" Medium-Duty Blue Scrubbing Pad (5/cs)
- Piranha 14" Medium-Duty Blue Scrubbing Pad (5/cs)
- Piranha 13" Medium-Duty Blue Scrubbing Pad (5/cs)

Green Floor Pads

This floor pad is designed for deep scrubbing needs. The pad is best used with speeds ranging from 175 rpms to 300 rpms. Works well on autoscrubbers when deep cleaning dirty floors. Can be used to prepare floors in scrub and re-coat programs.

- Piranha 20" Heavy-Duty Green Scrubbing Pad (5/cs)
- Piranha 17" Heavy-Duty Green Scrubbing Pad (5/cs)
- Piranha 15" Heavy-Duty Green Scrubbing Pad (5/cs)
- Piranha 14" Heavy-Duty Green Scrubbing Pad (5/cs)
- Piranha 13" Heavy-Duty Green Scrubbing Pad (5/cs)

High Performance/Stripping Pads

Black Floor Pads

This floor pad is designed for stripping floors and extra heavy-duty scrubbing. The pad is best used with speeds ranging from 175 rpms to 300 rpms. Works well on autoscrubbers when deep cleaning dirty floors. Can be used to prepare floors in scrub and re-coat programs.

- Piranha 20" Conventional Black Stripping Pad (5/cs)
- Piranha 17" Conventional Black Stripping Pad (5/cs)
- Piranha 15" Conventional Black Stripping Pad (5/cs)
- Piranha 14" Conventional Black Stripping Pad (5/cs)
- Piranha 13" Conventional Black Stripping Pad (5/cs)

Hi Performance Floor Pads

These floor pads were designed to work in harsh environments where multiple coats of floor finish and dirt is a problem. The thinline style pad provides aggressive results through the use of carbide impregnated synthetic fibers. This pad will rapidly remove layers of old floor finish. This pad is used on 175 rpm machines only.

- Piranha 20" Hi Performance (HP) Stripping Pad (5/cs)
- Piranha 17" Hi Performance (HP) Stripping Pad (5/cs)

Maroon Surface Prep Pads (3M)

These floor pads were designed for dry stripping or minimal water applications. Using these unique pads allows you to scrub / light strip and re-coat floors quickly and easily. This pad is used on 175 rpm machines only.

- Piranha 20" Maroon Surface Prep Pads (3M) (10/cs)
- Piranha 17" Maroon Surface Prep Pads (3M) (10/cs)



Diamond Honing Pads

These high performance diamond honing floor pads provide a great alternative to Diamond Honing Disks. These polyester floor pads are impregnated with diamond grit to provide an easy way to maintain and restore terrazzo and marble floors.

20" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
20" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
20" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
20" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)

17" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
17" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
17" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
17" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)

15" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
15" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
15" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
15" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)

14" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
14" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
14" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
14" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)

13" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
13" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
13" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
13" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)

14" x 20" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 20" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 20" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 20" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 20" - Black Dot - 100 Grit - Diamond Impregnated Floor Pads (2/cs)

14" x 28" - Green Dot - 3000 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 28" - Yellow Dot - 1500 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 28" - White Dot - 800 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 28" - Red Dot - 400 Grit - Diamond Impregnated Floor Pads (2/cs)
14" x 28" - Black Dot - 100 Grit - Diamond Impregnated Floor Pads (2/cs)



Stone Restoration Machine

King Pro – Concrete & Terrazzo Restoration System

The Piranha King Pro System is a propane-powered, planetary driven, complete system for Stripping, Honing, Polishing, and Burnishing polished concrete, terrazzo and marble floors.

The Piranha King Pro System is a machine engineered with the operator in mind. The Refresher is heavy and rugged enough to handle the aggressive demands of honing and polishing concrete, yet light and mobile enough to be highly maneuverable and smooth running for hours of continuous use.



The King Pro Multifunction 4-Step Process

STEP 1: Stripping/Deep Scrubbing Strip or deep scrub the floor to remove VCT floor finish, sealer or deeply ground-in soils. Many polished concrete, terrazzo and marble floors have been coated with VCT floor finish or sealer, reducing their luster and making them higher maintenance.

STEP 2: Honing

Hone the floor to remove scratches or sealers using the quick-change Velcro® driver with hybrid diamonds. These diamonds will cut more deeply than resins, but not as deeply as metal diamonds, allowing the scratches or sealers to be removed. **NOTE: Do not use hybrids on marble floors.**

STEP 3: Polishing

Polish the floor using the Velcro® drivers with resin puck diamonds or the Mighty-Lok® drive with diamond pads.

STEP 4: Burnishing

Apply guard and burnish the floor using the Mighty-Lok® head to accept burnishing pads or diamond impregnated pads. Burnish until the floor heats to 90F / 32C.

Key Features and Innovations Include:

- Gimbled head follows floor resulting in consistent gloss
- Rugged powder-coated US steel frame & body
- Self-leveling, mechanically sealed drive unit
- Synchronous positive drive belt with metal synchronous drive pulleys
- Solid-lube multi-directional bearings with Nylons seals
- Premium German precision centrifugal clutch
- Custom catalytic muffler
- 8 Gallon water tank for wet operations
- 2" Vacuum port for dry operations
- 11-gauge tube extra-heavy transport wheel
- Tool-free steel lug locking quick change heads
- Compatible w/ 3" puck-style and 10" pad diamonds
- Green LEED and GS-42 compliant dry with vacuum

Included Drive Heads:

3 x 10" MalGrit™ Strip Brushes
3 x 10" Mighty-Lok® Pad Drive
3 x 10" Velcro® Diamond Drivers

Available Options:

Subaru EH65V 22hp Engine
Auto Emission Shutdown
Lanyard Kill Switch

Refresher Specifications

Path Width	30" (76 cm)
Engine (std)	Kawasaki 603 cc
Centrifugal Clutch	standard
Head Pressure	330 lbs (150 kg)
Head Size	10" (25 cm)
Number of Heads	3
Head Speed	1295 RPM (Counter Clockwise)
Synchronous Drive Speed	250 RPM (Clockwise)
Machine Weight	482 lbs (218.6 kg)
Height	42.25" (107 cm)
Length	43.25" (110 cm)
Width	32" (82 cm)
Shipping Weight*	Approx. 420 lbs (190 kg)
Machine Warranty	1 year
Engine Warranty	2 years/500 hours
Green Certifications	EPA, CARB, CE, LEED, GS-42 Available with Blue Sky Certified Engine

* Shipping weight may change slightly due to varying skid weight.

Baseboard Scrubbing Machine

Piranha Baseboard Scrubber with Pad Driver

This versatile baseboard cleaning machine comes standard with pad driver, yet numerous upgrades transform this baseboard scrubber into a multi-surface cleaning machine. The 50' safety yellow power cord is ideal for small jobs. The heavy-duty 500 rpm brush motor provides years of life. At only 19 lbs, this unit is easily transported from job to job.



(Shown with optional Solution Tank)

ACCESSORIES:

Piranha Baseboard Scrubber Solution Tank

Piranha 6" Heavy-Duty Scrubbing / Stripping Grit Floor Brush

Piranha 8" Heavy-Duty Scrubbing / Stripping Grit Floor Brush

Piranha 6" Heavy-Duty Scrubbing / Stripping Baseboard Grit Brush

Piranha 8" Heavy-Duty Scrubbing / Stripping Baseboard Grit Brush

Piranha 6" Medium-Duty Scrubbing Nylon Baseboard Brush

Piranha 8" Medium-Duty Scrubbing Nylon Baseboard Brush

Piranha 6" Medium-Duty Scrubbing Nylon Floor Brush

Piranha 8" Medium-Duty Scrubbing Nylon Floor Brush

Piranha 6" White Floor Bonnet - Carpet Cleaning (6/cs)

Piranha 8" White Floor Bonnet - Carpet Cleaning (6/cs)

Piranha 6" Light-Duty Cleaning White Buffing Pad (5/cs)

Piranha 8" Light-Duty Cleaning White Buffing Pad (5/cs)

Piranha 6" Medium-Duty Cleaning Red Cleaning Pad (5/cs)

Piranha 8" Medium-Duty Cleaning Red Cleaning Pad (5/cs)

Piranha 6" Heavy-Duty Cleaning / Stripping Black Stripping Pad (5/cs)

Piranha 8" Heavy-Duty Cleaning / Stripping Black Stripping Pad (5/cs)

Piranha 6" Pad Driver (Use with Floor Pads)

Piranha 8" Pad Driver (Use with Floor Pads)



Upright Vacuums

Piranha Upright Vacuums

Choose from a variety of upright vacuums to fit your facility needs. From 12" - 18", Dirt Cup, Disposable Bags, Shake Outs, Cord Electric or Battery Operated, 30ft - 50ft cords, the choice is yours. All units are high performance and built to last.

Piranha Light Weight Series

The light weight series features a 13" unit with disposable bags and heavy duty belts. A variety to choose from with wood brush rollers to steel brush rollers, HEPA standard to HEPA Option, and Bare Floor Option.

Piranha Provac Series

The Provac series offers a choice from 12" - 18" with bag sensors, HEPA filtration, Single or Dual Motor, and high quality craftsmanship. These reliable units will enhance any facility.

****More Units Available - Please Contact Your Local Representative****



Wide Area Vacuums

Piranha Wide Area Vacuums

Piranha's Wide Area Vacuums give you the option of 28" or 30" wide cleaning paths, durability and powerful cleaning performance. Motor protection on your dual vacuum motors with high quality filters, gives you optimal performance every time.



Batteries

Piranha offers a full line of deep cycle and maintenance free batteries. With 6V and 12V options, we can cover any machine. These rugged, high quality batteries have stood the test of time. With thicker plates, our deep cycle batteries are built to last. Battery Filler Options are available for quick and safe maintenance of lead acid batteries. Maintenance free is also an option in AGM and Gel versions.



Pressure Washers

Designed to easily handle tough cleaning jobs and perfect for general cleaning or equipment maintenance. Piranha commercial pressure washers are available in gas or electric and great for light and heavy jobs.



Carpet Extractors

Piranha's dependable carpet extractors and upholstery cleaners work well in every environment. From hand-held, portable spot extractors to box to self contained walk behind units, we have a variety of options and offerings.




Dehumidifiers

In order to prevent mold and mildew, dehumidifiers are your first line of defense. When you notice conditions sustaining more than 40% humidity, it's time to break out the dehumidifiers. Piranha Brand's commercial line of dehumidifiers gives you options for any size space large or small. Dehumidifiers are also helpful during the summer to aid in drying your floor finish.



Hydroxyl Generators

Hydroxyl Generators are the new wave of technology in fighting bacteria, mold, viruses, odors, VOCs, and more. This technology was invented for NASA and harnesses Mother Nature's natural way of cleaning our air. By throwing hydroxyls into the air, you are able to decontaminate any hard and soft surface. Since we have lived with hydroxyls our entire lives, they are completely safe. So safe, you can run the units in occupied spaces. Piranha Brand is proud to back Green Cleaning, New Technologies.

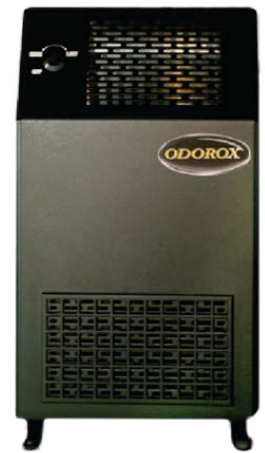

Air Scrubbers

Air Scrubbers are a passive way to clean your air. The air coming into the unit is filtered with specialty filters and then pushed back out into the breathable area. Piranha Brand's commercial line of air scrubbers gives you more options on air cleaning ability.





**More Products Available
Please Contact Your Local Representative for More Information**

www.PiranhaBrandProducts.com