



CREATING A CLEANER, SAFER, HEALTHIER WORLD.

EQUIPMENT



R3

COMPACT, RAPID DRYING CARPET CLEANER

Go places you haven't gone before – with ReadySpace® technology

- Turn congested areas quickly with patented ReadySpace technology for carpet that is clean, dry, and ready for use in less than 30 minutes
- Clean compact spaces easily with ultra-low profile, compact design
- Quietly clean with true OSHA recognized 69 dBA sound level

CARPETS CLEANED WITH READYSPACE® TECHNOLOGY ARE DRY AND READY FOR FOOT TRAFFIC IN **LESS THAN 30 MINUTES**



CLEAN, HEALTHY ENVIRONMENTS

ReadySpace technology helps reduce mold and bacteria growth and leaves clean, healthy spaces while using up to 80% less water and leaving up to 90% less water in the carpet.

INCREASE PRODUCTIVITY IN TIGHT SPACES

Clean with ease in tight, congested areas, such as office spaces, with forward and reverse cleaning action. The ultra low profile design and Insta-Adjust™ handle extends your cleaning reach under low-profile desks and tables.

EASY TO FILL AND EMPTY TANKS

Easy to fill, empty, and clean Hygenic® lift-off tanks offer a unique compact design. Ergonomic handles and grips ensure easy pick up.


BEAUTIFULLY CLEAN, ALWAYS READY CARPET SPACES

Improve carpet appearance and luster with ReadySpace technology's exclusive soil transfer rollers that lift and remove the dirt vacuuming leaves behind. The results are exceptional:

- Keep high-traffic areas looking new with frequent cleanings.
- Reduce chemical build up to help prevent resoiling.
- Reduce risk of slip-and-fall incidents when transitioning from just cleaned carpet to hard floors.

INSIDE THE

R3

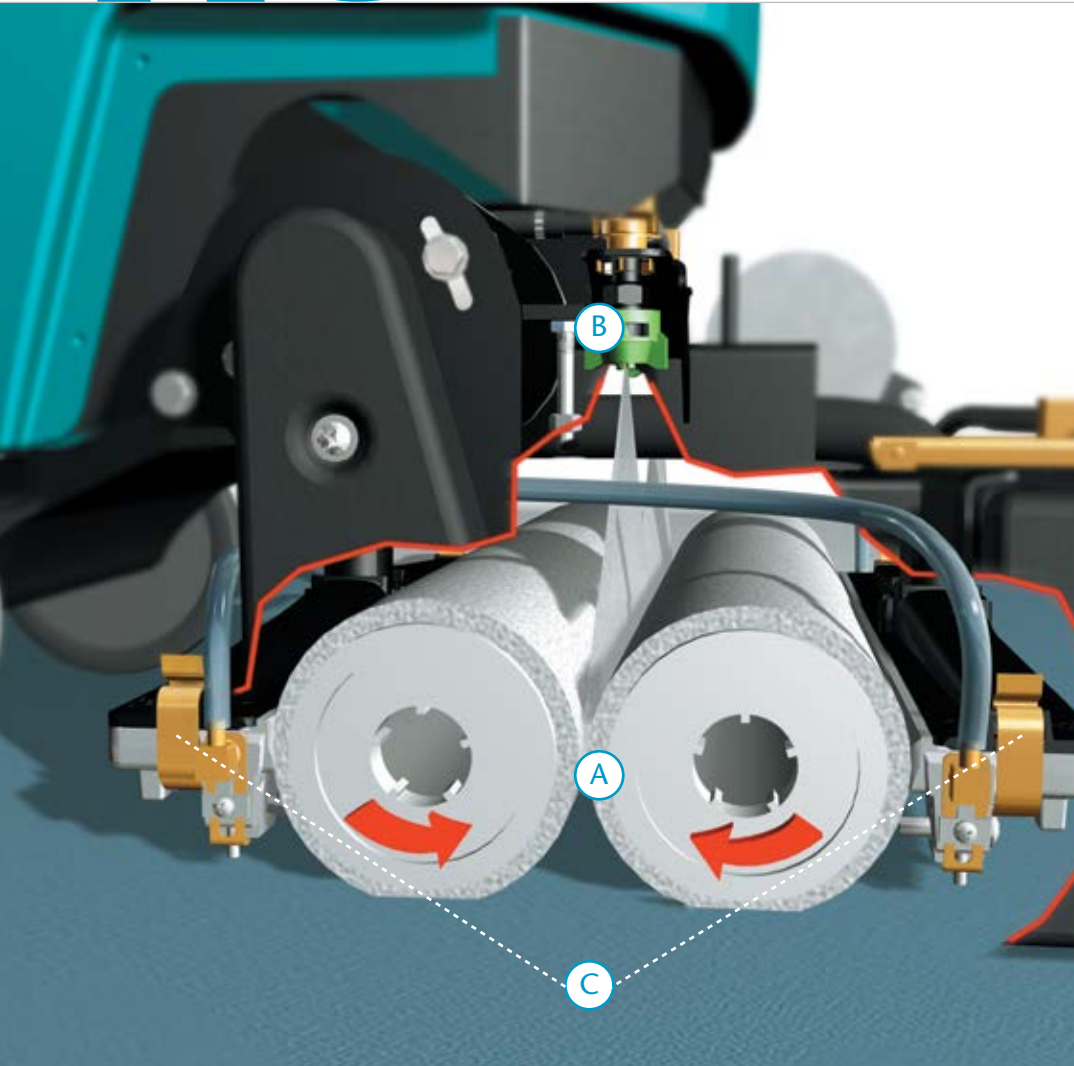

PATENTED READYSPACE® TECHNOLOGY

- A** Unique soil-transfer rollers are the basis for ReadySpace. When damp, these fabric rollers grab dirt from the carpet fibers and lift it into the machine.
- B** Inside, a sprayer rinses soil from the rollers, not the carpet.
- C** Two powerful individual vacuum shoes transfer the dirty water into the recovery tank.

READYSPACE®

More than clean, it's ReadySpace.®


FROM CLEAN TO CROWD IN MINUTES.

Reopen spaces sooner with ReadySpace technology.

First Shift

6:30 AM – Cleaning crew finishes cleaning small office space with Tennant R3.

7:00 AM – Carpet is clean, dry, and ready for office traffic.

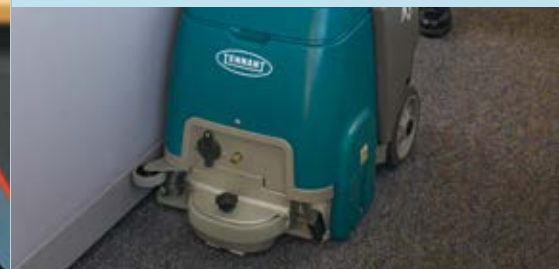

Check In

2:30 PM – Housekeeping finishes cleaning the hotel room with Tennant R3.

3:00 PM – Carpet is clean, dry, and ready for guest check in.



Store Open

8:30 AM – Mall maintenance finishes cleaning stores.

9:00 AM – Carpet is clean, dry, and ready for shoppers.



TENNANT TRUE® PARTS, SERVICE AND FINANCE SOLUTIONS

- Reduce rework, labor and safety costs by using only Tennant True parts and service.
- Ensure optimal cleaning performance by selecting a Tennant True Service program provided by a network of over 400 factory-trained Tennant service representatives.
- Improve uptime by leveraging Tennant True parts and service.
- Simplify budgeting by bundling Tennant True service plans, including parts, into the purchase or financing of your machine.

Choose GE Capital or U.S. Bancorp, our leasing providers, for simple, quick financing with flexible upgrade options.

R3 COMPACT, RAPID-DRYING CARPET CLEANER

CLEANING SYSTEM

Cleaning path 15 in / 380 mm

BRUSH DRIVE SYSTEM

Roller motor (2) 0.3 hp / 0.22 kW
Roller speed 450 rpm
Roller size (dual cylindrical) 15 in / 380 mm

SOLUTION SYSTEM

Solution tank capacity 5 gal / 19 L
Solution pump pressure 65 psi / 4.48 bar
Solution spray rate 0.2 gpm / 0.76 lpm

RECOVERY SYSTEM

Recovery tank capacity 5 gal / 19 L
Vacuum fan 2-stage, 1.2 hp / 2-stage, 0.89 kW
Vacuum motor airflow (max) 99 cfm / 2.8 m³/min
Vacuum system sealed waterlift 86 in / 2,180 mm

POWER SYSTEM

Power cord 50 ft / 15 m

MACHINE SPECIFICATIONS*

Length 30 in / 760 mm
Width 19 in / 480 mm
Height 28 in / 710 mm
Weight 117 lb / 53 kg
Sound level (operator's ear) 69 dBA

ACCESSORIES

Optional tools available.

WARRANTY

See your local representative for warranty information

*Dimensions are measured with handle folded flat for storage. Specifications subject to change without notice.



Carpet and Rug Institute (CRI)
Seal of Approval – Certified Bronze.

SEEING IS BELIEVING

For a demonstration or additional information,
call +1.800.553.8033 or email info@tennantco.com

Tennant
701 North Lilac Drive
Minneapolis, MN 55422 USA

USA/Canada: +1.800.553.8033
Quebec: +1.800.361.9050
Overseas: +1.763.540.1315